

Sufacta Rooflight Operating Manual

Always Before Operation

Check there are no obstructions that may interfere with the screen as it will raise/lower.

Manual operation

Cord

- Pull the cord to extend the blind, release the cord to retract the blind. Never let go of the cord as the blind will retract with excessive speed and the pull cord could burn your hands.

Gear Operation (use)

- Fold the free end into a crank shape and using this handle, turn in one direction. Observe direction the blind moves.
- If the desired movement is not achieved, reverse direction.
- Stop when the desired position is reached (handle can be folded straight again if desired).
- Do not over turn.

Attaching Rod

- for Detachable Rod Gear Operation, offer the bell on the end of the rod up to the spigot hanging from the blind box.
- Push home and rotate the rod in any direction to engage.

Detaching rod

- for Detachable Rod Gear Operation, lift the rod and turn the opposite direction to that last used by a small fraction of one turn.
- The rod should now drop free.